 




OPERATOR'S MANUAL
MANUAL del OPERADOR
用户使用说明书

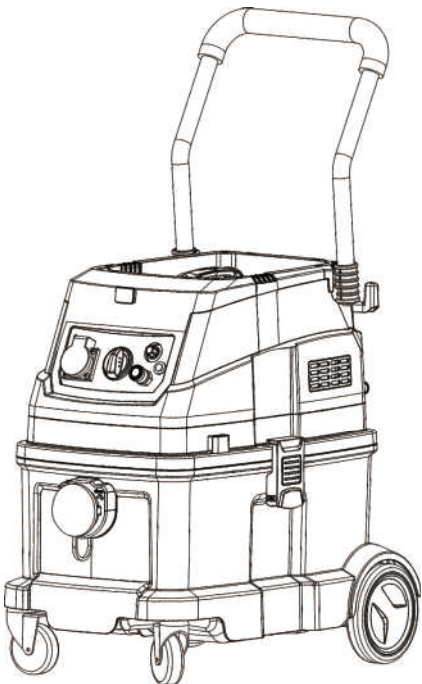

WET & DRY
VACUUM CLEANER
VAC40



ShineMate Refinishing Tool System

Yongkang Meiloy-K&FP Tools Co.,Ltd.
No.218 Meilong Road, Yongkang, Zhejiang, China
info@shinemate.com www.ShineMate.com

1. IMPORTANT SAFETY INSTRUCTIONS

BEFORE USE AND OPERATION, FIRSTLY READ CAREFULLY THIS MANUAL. KEEP THE MANUAL IN A SAFE PLACE FOR FURTHER REFERENCE (THIS MANUAL THE GUARANTEE CARD PROVIDES THE BASIS FOR ANY CLAIMS).

ASSIGNMENT

This tool is designed to be used as a dust extractor to work with sanding machines, and general dust cleaning. Before work and operation, user shall read carefully all warnings, instructions, guidelines, drawings and tool specifications.

Any misuse or use inconsistent with intended purpose may result in hazard and body injuries.

Safety Use Considerations

- Do not use in areas with flammable liquids, gases, or without explosion-proof requirements.
- Turn off the switch and take off the plug before clean or repair to avoid the risk from fire.
- Hose and the body may cause electrostatic, pay attention to this.
- Do not tremble, pull, fold the hose. When the hose is damaged, do not continue to use. Do not use heavy or sharp blade pressure on the hose.
- Do not let the power cord get clamped in the crack of the door or use the cord to pull the vacuum cleaner, protect the cord.
- Protect your own safety when using, keep the body away from the vacuum cleaner's suction or movable parts.
- Avoid putting the whole machine in the water. Do not touch the plug with wet hands or a wet towel to prevent electric shock.
- Voltage must be consistent with the power supply voltage. Do not use beyond the voltage range.
- Before water suction, please remove the dust bag, filter; use the sponge filter.
- Empty it when the tank has a lot of dust..

⚠ WARNING

- Do not let glass, tack, iron, and other sharp debris remain in the hose or body; otherwise, it will damage the hose, filter bag, etc.
- Do not suck up hot, fire, caustic, flammable, and explosive objects, avoid the risk from fire or electric shocks.
- Hair, paper, cement, line, putty powder, sticky objects will easily block the vacuum, and cause fire; avoid suction of these objects.
- Do not use for a long time when the air inlet is blocking, otherwise will damage the vacuum.
- Stop use when abnormal sound, check and clean.
- Please do not let children play with vacuum cleaner accessories to prevent accidents.
- When the current is big, use a distribution board to prevent from fire.
- Pull off the plug when not in use. Do not leave it unattended in working status.
- Do not keep the vacuum or cord near hot sources, protect from fire.
- Do not use a damaged cord or plug. If broken, must be repaired by professionals.

Important safety instructions

- If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

2. SAFETY RULES

⚠ WARNING

Before operation, firstly read carefully this manual. Failure to follow all instructions listed below may result in electric shock, fire and/ or serious injury. The term “power tool” in all of the warnings listed below refers to your mains operated (corded) power tool or battery operated (cordless) one.

WORK AREA

- Keep work area clean and well-lighted. Cluttered or dark areas invite accidents.
 - Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
 - Keep children and bystanders away while operating a power tool.
- CAUTION!** Distraction can cause you to lose control over the power tool.

ELECTRICAL SAFETY

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.
- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, heaters and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Any contact with water poses the risk of electric shock.
- Any modification of power cord is forbidden. Never use

- the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor reduces the risk of electric shock.

PERSONAL SAFETY

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use the power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operation power tools may result in serious personal injury.
- During operation personal protection equipment is required. Always wear safety goggles. Personal protection equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce risk of body injuries.
- Avoid accidental starting. Ensure the switch is in the OFF position before plugging in. Carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents and serious body injuries.
- Do not overreach. Keep proper foot position and balance at all times. This enables better control of the power tool in unexpected situations.
- During operation proper clothing is required. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught or trapped by moving parts.
- If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly operated. Use of such devices can reduce dust related hazards.

PRECAUTIONS DURING OPERATION

- Do not force the power tool. Use and operate the power tool according to its intended purpose. The correct power tool will do the job better and will ensure safety.
- Do not use the power tool, if the switch does not turn on and off. Any power tool with inoperative switch poses hazard and must be repaired.
- Before any adjustments, changing accessories or storing power tools, firstly disconnect the plug from the power source. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools pose hazard when operated by untrained or unauthorized users.
- User shall regularly perform maintenance inspections and check in respect of misalignment, clearance, play, defects, damages, excessive wear of other irregularities that may affect power tool operation. In case of any damage, power tool shall be repaired before use. Many accidents are caused by poor maintenance.

- Keep cutting tools sharp, clean and in good repair. Properly maintained cutting tools with sharp cutting edges ensure control over the power tool during operation.
- Use the power tool, accessories and tool bits etc., in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work to be performed. Use of the power tool inconsistent with intended purpose can result in a hazard or accident.

SERVICE

- Any works related to power tool servicing shall by performed by qualified person. For repairs and service use only original spare parts to ensure safety during power tool operation.

⚠ WARNING

- To prevent the risk of body injury, electric shock and tool damage, do not immerse tool in water or any other liquid and protect the tool against any contact with water.

REPAIRS

- In case of any damage or when repair is necessary, contact the nearest authorized service center.

POWER CABLE

Do not bend the power cord at will. Check the power cord frequently. If it is damaged, replace it in time.

3. PRODUCT FEATURES


- Automatic cleaning
- Powerful and multi-function
- Wet & Dry
- Multiple air filter system guarantees hygienic cleaning
- Work with air and electric tools
- With remote control

4. TECHNICAL DATA


Model No. ----- VAC40		
Input Voltage	100-120V~	220-240V~
Input Power	Rated 1200w	Rated 1600w
Max. Airflow	102m³/h	126m³/h
Vacuum Pressure	19 kPa	21 kPa
Hose Diameter	38mm	
Dust Tank Capacity	40 L	
Dust Class	M	
Integrated Power Socket	YES	
Auto-Start Function	YES	
Suction Control	Mechanical	
Noise Level	≤80 dB(A)	
Power Supply Cord	5 meter	
Bare Tool Weight	16.5kg	
Dimensions (L x W x H)	620x370x590mm	

5. PRODUCT INFORMATION

 MACHINE STRUCTURE:

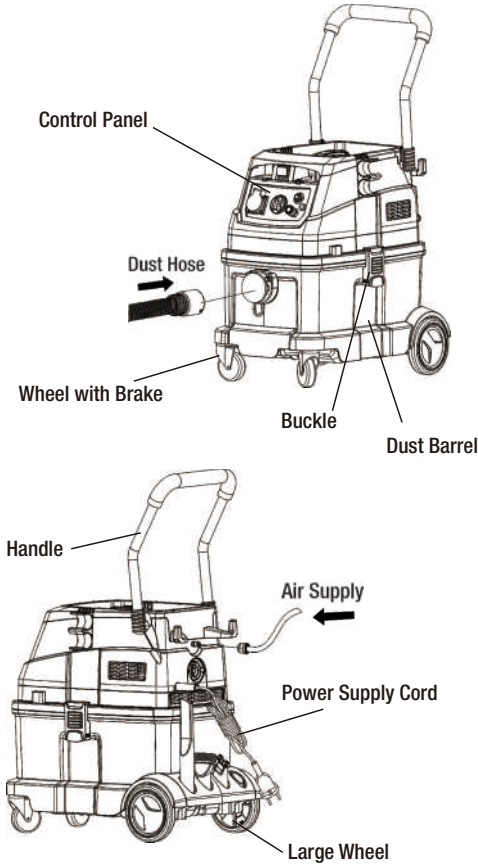

CONTROL PANEL:

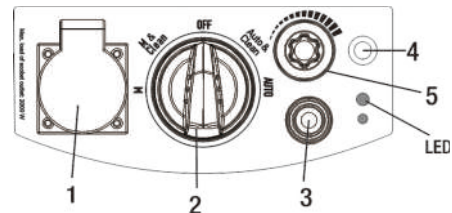 

- "1" Electric tool connector
- "2" Function knob, select machine functions as needed.
- "3" Pneumatic tool connector
- "4" When the current is greater than 15A, machine will automatically shutdown, press the reset button to restart
- "5" Increase power clockwise

START, STOP AND SPEED CONTROL:

- Manual Mode
- Continuous vacuum operation

- Manual Mode + Self-Cleaning Function
- Turn it off
- Auto Mode + Self-Cleaning Function
- Auto Mode
- Linked automatic start/stop (vacuum and tools start/stop simultaneously)
- When the vacuum cleaner is working, the remote control can be used to control the starting and stopping of the motor and the speed regulating function.
- LED lights red when the filter needs to be cleared

 
Notice:
During the HEPA being cleaned automatically, the filter self-cleaning function will be started every 20s, and you will hear the sound. This is the normal working state, so you don't need to worry.

Self-Cleaning Function:
When the filter is clogged with dust, resulting in blocked airflow and reduced suction efficiency, the machine can activate the self-cleaning function to restore suction performance. This function does not require prolonged continuous use. It should only be activated for a short period to restore efficiency when the filter is clogged and suction is noticeably reduced. If this function does not take effect, please clean the internal dirt in a timely manner.

6. ACCESSORIES & CONSUMABLES (OPTIONAL)

- Multi-functional Work Stand VAC40-A01
(Can be mounted on the extractor for convenient storage and organization of accessories)
- Remote Control VAC40-A02
(Used to control the extractor, enabling remote start, stop, and speed adjustment functions)
- Filter Cartridge VAC40-A03
(Built-in HEPA filter cartridge for filtering fine dust, putty dust, and other small particles)
- Dust Collection Bag VAC40-A04
(Used for collecting large dust particles and debris)
- Vacuum Hose (with Connector) VAC40-A05
(Connects the extractor to sanders or bent tube. Anti-static, length 4.7m)
- Protective Sleeve VAC40-A06
(Used to cover and protect the vacuum hose and power cord)
- Y-Connector VAC40-A07
(Also known as a Y-adaptor. Splits a single dust inlet into two independent cleaning channels for flexible and efficient vacuuming)
- Hose clamp 73122
(For securing the vacuum hose and the sander power cord)

Cleaning Nozzle Set A05(Optional)

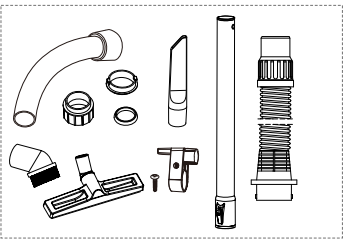


- 1.Semi-Circular Brush Nozzle
(Equipped with a brush head for vacuuming, cleaning, and washing)
- 2.Crevice Nozzle
(For cleaning narrow gaps, tight spaces, and other small areas with wet/dry suction)
- 3.Floor Brush Nozzle
(Can be used with the telescopic metal tube for cleaning floors or large flat work surfaces)
- 4.Telescopic Metal Tube
(Adjustable length, pairs with the floor brush nozzle for floor vacuuming and cleaning, length 48-78cm)
- 5.Vacuum Hose (with Connector)
(Connects the extractor to sanders or bent tube. Anti-static, length 4.7m)
- 6.Bent Tube
(Connects the vacuum hose to nozzles, brush heads or telescopic metal tube)
- 7.Accessory Holder
(Mounted on the vacuum hose, bent tube or telescopic tube for storing brush heads, nozzles, and other accessory)
- 8.Pan Head Self-Tapping Screw
(Used to secure the accessory holder)

7. OPERATIONE METHOD

TO INSTALL:
► Release the lock catch to open the up housing, take out wheels and accessories.

 TO CLEAN THE FILTER:
► Turn anticlockwise as shown in the figure to release 6 locking hooks and take out the HEPA filter.

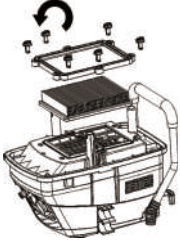

Notice: When installing the HEPA filter, turn the lock hook in the opposite direction.

- a)Install the large wheel assembly into a plastic bucket and secure it with two screws.
- b)Insert the universal wheel into the plastic bucket.

 
Note:
Before storage, ensure the wet filter is air-dried. If there is any liquid or dirt inside the machine, clean it thoroughly and allow it to dry completely. The exterior should also be cleaned and air-dried.

TO EMPTY DUST BARREL:
IF the dust barrel is full, please empty it as soon as possible
► Release the buckles and remove the upper housing assembly.


- Clean up the garbage.
- a.The dust bag is taken out and thrown into the garbage can (If equipped with paper bags).
- b.Put the garbage in the garbage can.



Wash the HEPA filter under tap water instead of using a brush.

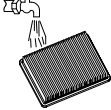

 The HEPA filter can be dried in the sun or naturally.

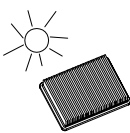

8. COMMON FAULT GUIDES

Fault	Possible Reason	Handling Method
Motor failure	1. Check if the plug is connected properly. 2. Check if the power socket has electricity. 3. Check if the switch is turned on.	1. Insert the plug into the socket. 2. Make sure the power socket has electricity. 3. Turn on the switch.
Suction abate	1. Check if brush, hose, and telescopic tube are blocked. 2. Check if dust bag is full of dust. 3. Check if the filter is blocked.	1. Clean the blockages. 2. Clean the dust bag. 3. Clean the filter.
Hot air outlet	1. Check if the suction is normal. 2. Check if the working time is more than 20 minutes.	1. Hot air from the vacuum cleaner is caused by motor heat conduction. It's common, you can continue to use. 2. Turn off to rest for 20 minutes before using again.

9. MACHINE MAINTENANCE

- In order to lengthen the life time, single using time is better not more than 20 minutes.
- In order to lengthen the life time, clean the body, filter, and dust bag after use.
- Wind the power cord well, put accessories in slot.
- Clean the dirty water after using to prevent the rusting or corrosion of the barrel.
- Clean the surface of the vacuum cleaner with a dry cloth to prevent water from entering, causing a short circuit or even burning.

10. WARRANTY SERVICE

- (1) During the warranty period, ShineMate is only due to material defects in the product or process problems caused by the failure to give free repair, the user requires warranty must be presented with purchasing bills and warranty cards, clear statement of the full name of the purchased product model, the body of the nameplate on the product code, the date of purchase, while providing the machine and accessories requires warranty, and are authorized by the maintenance center to verify, or do not have warranty rights.
- (2) During the warranty period, the following consumable parts are not covered by the warranty due to natural wear and tear in use:
 - Wear in service: commutator, bearing, bushing, gear, O-ring, etc..
 - Consumables: Power cord, plug, cable sheath, handle, housing, polishing pads, backing plate of sander, etc..*Non-warranty parts and maintenance labor costs are the responsibility of user.
- (3) The following are not covered under warranty:
 - Failure to present a valid warranty card and proof of purchase, or the information on the warranty card does not match the physical object.
 - Damage caused by failure to use, maintain and store the product in accordance with the instructions for use.
 - Damage caused by drooping, water ingress, etc., due to improper use, storage or transportation.

- Damage caused by failure to use original ShineMate parts or recommended accessories and lubricants.
- The user disassembles, or causes damage by repairing, rebuilding, disassembling, or maintaining in non-ShineMate authorized service points.
- Damage caused by forcing the brakes or exerting excessive pressure on power tools when they are operated at high speed.
- Damage caused by starting a power tool without reaching a constant speed or stopping it completely before it starts to process a work piece or change functions.
- Working in dusty or humid environments for long periods of time without timely maintenance due to the entry of foreign objects.
- (4) ShineMate reserves the right to modify the above terms and conditions at any time without notice, and has the final interpretation of the above warranty terms.
- (5) Visit the official website www.ShineMate.com for the latest product information.

EXEMPTION FROM LIABILITY

The manufacturer and his representative are not liable for any damage and lost profit due to interruption in business caused by the product or by an unusable product. The manufacturer and his representative are not liable for any damage which was caused by improper use of the power tool or by use of the power tool with products from other manufacturers.

CE-DECLARATION OF CONFORMITY

We hereby declare under our responsibility that the said electrical device (Vacuum Cleaner) remains in compliance with the Essential Requirements for Safety Directives 2006/42/EC concerning machines, 2014/30/EU concerning electromagnetic compatibility.

Moreover the device fulfils the requirements of standards:

EN60335-1, EN 60335-2-69,EN62233, ENIEC55014-1, ENIEC 61000-3-2, EN 61000-3-3, ENIEC55014-2, 2014/30/EU, 2006/42/EC



You now own a quality product manufactured by ShineMate.

Distributed by:

Warranty Card

Serial No.

DETAILS OF PRODUCT:

Machine _____ Model _____

Voltage _____ Purchase Date _____

Customer name and address _____

Post Code _____



You now own a quality product manufactured by ShineMate.

Distributed by:

Warranty Card

Serial No.

DETAILS OF PRODUCT:

Machine _____ Model _____

Voltage _____ Purchase Date _____

Customer name and address _____

Post Code _____

STATEMENT OF WARRANTY CARD

- (1) This product is guaranteed from defects in material and workmanship, for the detailed guarantee period, subject to your local distributor and legal warranty regulations, effective and evidenced from date of original invoice or delivery note.
- (2) Defects caused by normal wear and tears, unauthorized/improper maintenance/handling or overload are excluded from this guarantee.
- (3) In the event of malfunction within the guarantee period, please return the product UNDISMANTLED to your dealer with the warranty card.
- (4) Your statutory rights in respect of defective products remain unaffected by the warranty.