 




**OPERATOR'S MANUAL**  
**MANUAL del OPERADOR**  
**使用说明书**

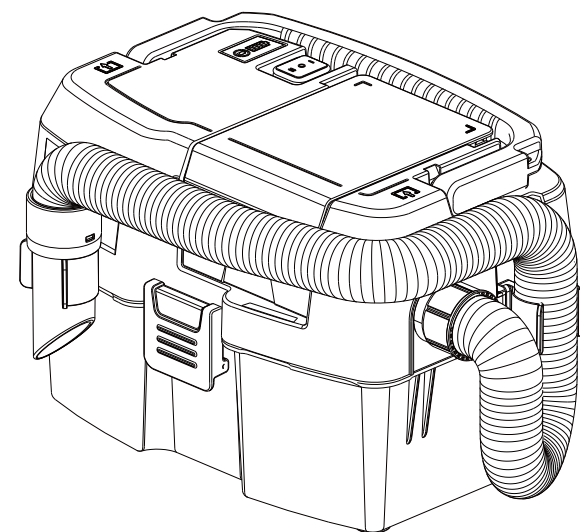

## **Wet & Dry Cordless Vacuum Cleaner**

**Supplier:**

K&FP Limited  
info@shine-mate.com  
www.ShineMate.com

**Manufacturer:**

Yongkang Meiloy-K&FP Tools Co.,Ltd.  
No.218 Meilong Rd., Yongkang, Zhejiang, China



To reduce the risk of injury, user must read and understand operator's manual.

# 1.IMPORTANT SAFETY INSTRUCTIONS

**⚠ WARNING** READ AND UNDERSTAND ALL INSTRUCTIONS. Failure to follow all instructions listed below, may result in electric shock, fire and/or serious personal injury.

## SAVE THESE INSTRUCTIONS

►The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. children being supervised not to play with the appliance.

►This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

►Do not expose the product to rain, please store the product indoors.

►Do not immerse in water or liquids.

►To prevent accidental activation of the product, make sure it is turned off before picking up or carrying the product.

►Do not leave this unit unattended while a lithium battery is installed.

►When picking up battery-powered products, make sure your fingers are at the power switch position to prevent accidents caused by sudden power supply.

►Keep hair, loose clothing, fingers and body parts away from openings and moving parts of the unit and its accessories.

►Disconnect the battery pack from the appliance before adjusting the device, changing accessories or storing the device. Such preventive safety measures can reduce the risk of accidental activation of equipment.

►Before routine cleaning or maintenance, please remove the battery from the device.

►If the device has hand-held accessories (such as pet brushes, electric heads, etc.), users should avoid getting caught.

►The charger can only be used indoors, please make sure the battery and charger are in a dry environment. Do not store or charge the battery outdoors or on wet surfaces, and do not allow the charger to get wet.

►Never handle the charger (including the charger plug and terminals) or batteries with wet hands.

►Do not use chargers with damaged cables or plugs. If the product or charger does not work properly, or it is broken, damaged, left outside or dropped into water, please contact the official customer service or designated dealer.

►Do not incinerate the charger, battery or device even if the product is severely damaged. Batteries may explode in fire.

►Only use the charger specified by the manufacturer for charging, using other chargers may pose a risk of injury and fire.

►Please use only the specified battery pack, using other battery packs may cause personal injury or fire.

►When the battery pack is not in use, keep it away from

metal objects such as paper clips, coins, keys, nails, screws or other small conductive metal objects. Contacting these objects may result in burns or fire. Under incorrect conditions, liquid might eject from the battery and must be avoided. In case of accidental contact, rinse with water. If liquid comes into contact with eyes, seek medical attention immediately.

►A damaged or modified battery may cause an unexpected situation that could result in fire, explosion or personal injury.

►Do not expose the battery pack or device to fire or excessive temperature, follow all charging instructions and never charge the battery pack or appliance outside the temperature range specified in the instructions.

►Improper charging or outside the specified temperature range may damage the battery and increase the risk of fire.

►Use only the type of liquid specified in the operating section of this manual, and in the specified amount.

►Do not get liquids into equipment containing electrical components and batteries.

►Before any wet pick-up operation, always install the float.

►If this unit does not work properly, has been dropped, damaged, placed outdoors, or dropped in water, do not attempt to operate it, but take it to an authorized service center for repair.

►If the device is damaged, it must be replaced by the manufacturer, the manufacturer's agent or a similarly qualified person to avoid danger.

►Do not use with the opening blocked;

►Use it after installing the filter;

►Please use the product according to this manual. Please use only the accessories and matching products recommended by ShineMate.

►Be sure to use this device as specified in this manual.

►Be sure to use accessories recommended by the manufacturer.

### ⚠ WARNING

►Do not use to sweep flammable or combustible liquids (such as gasoline), or use the device in areas where flammable or combustible liquids may be present.

►Do not use to clean up toxic substances (chlorine bleach, ammonia, drain cleaner, etc.).

►Do not use this device in a confined space filled with vapors from oil-based paint, paint thinners or some moth-proof substances, combustible dusts or other explosive or toxic vapors.

►Do not use to sweep hard or sharp objects such as glass, nails, screws, coins, etc.

►Do not use for sweeping burning or smoking objects such as cigarettes, matches or hot ashes.

►Never put any object into the opening.

Please keep this safety notice for future reference

## 2.SYMBOLGY



Before switching on the power tool, read the operating manual!



Device is suitable for use indoors only. Store electric power tool and batteries in dry rooms.



There is a risk of electric shock in case of incorrect use.



Only charge batteries at temperatures between 4°C to 40°C. Protect the battery from heat, e.g. from continuous exposure to sunlight and fire.



Do not throw battery pack in the fire. There is a risk of explosion.



Do not expose the battery pack to rain, keep the battery pack away from water.



Recycling raw materials instead of waste disposal. Do not throw the electric power tools into the household waste! Power tools must be collected separately and recycled in an environmentally friendly manner.



## 3.Product Parameters

|             |               |                 |
|-------------|---------------|-----------------|
| Model       | EC400         | EC405           |
| Voltage     | 18V DC        | 18V DC          |
| Input Power | 110W/150W     | 90W/180W        |
| Motor       | brushed motor | brushless motor |

|                    |           |           |
|--------------------|-----------|-----------|
| Rotation Speed     |           |           |
| Level 1/Low speed  | 28000/min | 28000/min |
| Level 2/High speed | 33000/min | 36000/min |

|                    |             |             |
|--------------------|-------------|-------------|
| Max. Air Volume    |             |             |
| Level 1/Low speed  | 1.3 CBM/min | 1.3 CBM/min |
| Level 2/High speed | 1.6 CBM/min | 1.6 CBM/min |

|                                     |       |         |
|-------------------------------------|-------|---------|
| Max. Sealing Suction (water column) |       |         |
| Level 1/Low speed                   | 7 kPa | 12.5kPa |
| Level 2/High speed                  | 9 kPa | 19.8kPa |

|               |      |      |
|---------------|------|------|
| Tank Capacity |      |      |
| Dry Vacuuming | 3.8L | 3.8L |
| Wet Vacuuming | 5.5L | 5.5L |

|                   |               |               |
|-------------------|---------------|---------------|
| Dimension (LxWxH) | 330x230x228mm | 330x230x228mm |
| Net weight*       | 2.5kg         | 2.59kg        |

\*Battery and attachments excluded

## 4.Equipment application

4.1 The equipment can be used in the automotive, household and industrial fields, and can be used for dry and wet, blowing and suction, including:

►**Car interior cleaning:** suitable for dust cleaning of car interiors, carpets, seats, cushions, etc.

►**Household fabric cleaning:** suitable for dust removal and cleaning of carpets, sofas, blankets, curtains, mattresses, pillows and others.

►**Industrial dust removal:** used with grinding tools for dust collection and dust removal.

### 4.2 Compatible battery packs

|                    |             |             |
|--------------------|-------------|-------------|
| Model              | B1825A      | B1850A      |
| Battery            | 18V/2.5Ah   | 18V/5.0Ah   |
| Weight             | 0.4kg       | 0.7kg       |
| Working Ambient    | +4°C~ +40°C | +4°C~ +40°C |
| Working time*      |             |             |
| Level 1/Low speed  | 30min       | 60min       |
| Level 2/High speed | 20min       | 45min       |

\*Note: The specific working time is related to the speed level and load.



### 4.3 Compatible chargers:

|                 |                  |                  |
|-----------------|------------------|------------------|
| Model           | BC181            | BC182            |
| Voltage         | 90W              | 160W             |
| Rated power     | 18 VDC, 4.0Amps  | 18 VDC, 6.5Amps  |
| Weight          | 0.46kg           | 0.85kg           |
| Output          | 100-240V~50/60Hz | 100-240V~50/60Hz |
| Working Ambient | +4°C~ +40°C      | +4°C~ +40°C      |
| Working time    |                  |                  |
| 2.5Ah           | 50-60min         | 35-50min         |
| 5.0Ah           | 90-100min        | 45-60min         |

### ⚠ WARNING

Use only chargers and battery packs specified by ShineMate, and read the attached operating manuals.

## 5.Product Description

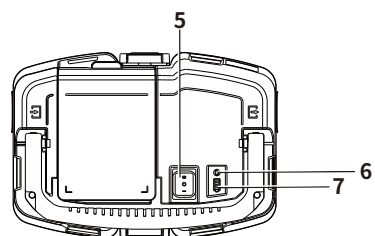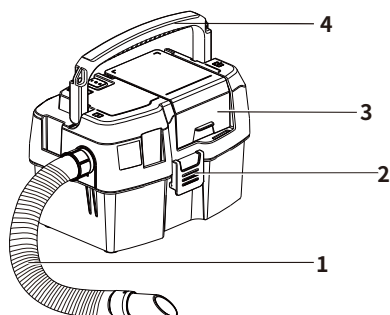

- 1.Suction hose
- 2.Lock latch
- 3.Battery socket
- 4.Handle
- 5.Switch
- 6.Battery display button
- 7.Battery indicator

### Suction Nozzles


1. Oblique nozzle:  
(it comes with the suction hose ,  
for rapid vacuuming of large areas)
2. Crevice nozzle:  
(for vacuuming of corners, crevices and  
narrow areas)
3. Flat suction nozzle:  
(for normal vacuuming, or upholstery cleaning)
4. Long conical suction nozzle:  
(for vacuuming of deep gaps and corners)
5. Water suction nozzle:  
(for upholstery cleaning, as well as wet and  
dry vacuuming)
6. Spray bottle  
(To contain and spray cleaning solvents)

### Adapter


To connect the suction hose and the nozzle,  
compatible with 32mm/35mm nozzles  
on the market.



### Combined hanger/hook

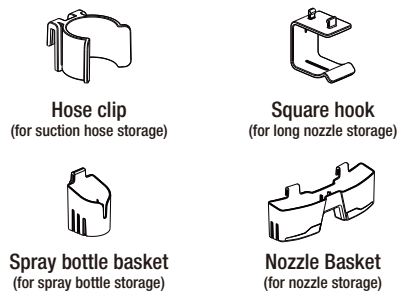

### Common consumables

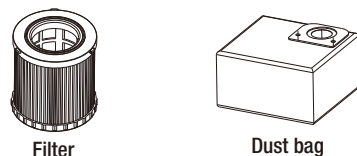


## 6.Assembly and Use

### Battery Charging

- Plug the charger into a power outlet, align the battery pack with the socket and slide in.
- While charging, the green indicator on the battery flashes to indicate that it is charging.
- If the red indicator light on the charger flashes, it means the battery or charger is faulty. Please try again or contact ShineMate for assistance.
- After charging is complete, the green indicator light on the charger will stop flashing and stay on.
- To remove the battery from the charger, press the release button on the battery pack and pull it out.
- During charging, the temperature of the battery pack and the surrounding environment should be between +4°C and +40°C.
- When the charger senses that the temperature of the battery pack or the surrounding environment is too cold or too hot, the red LED light will be on, and stop charging.


### Battery Installation

- Open the battery cover on the top.

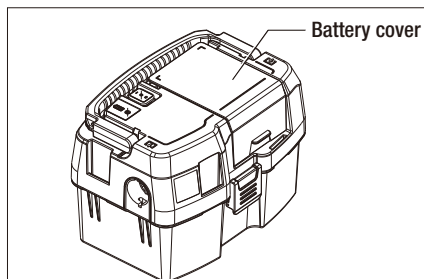


Note: Open the battery cover vertically up.

- Align the battery pack with its mounting position, then push and slide it all the way until it locks with a "click". Then close the battery cover.

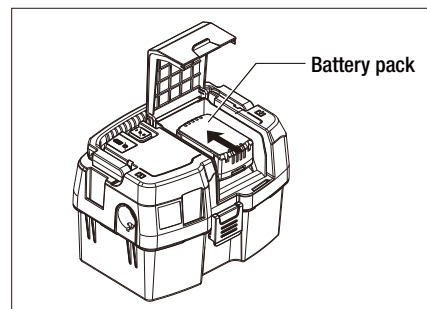

- To remove the battery pack, press the release button and pull the battery pack out.

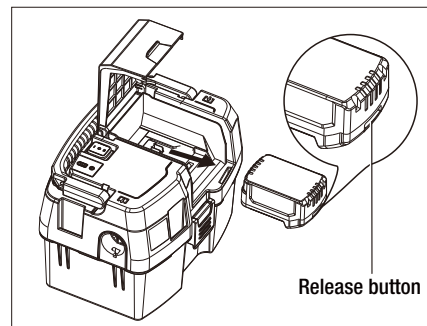


### ⚠ WARNING

To reduce the risk of personal injury, turn the power switch to "○" and disconnect all accessories before assembly. Hold the vacuum cleaner and the battery pack firmly when installing or removing the battery pack. Avoid the battery pack slipping from your hands, causing damage to the vacuum cleaner and battery pack, or even personal injury. Be careful not to get your fingers caught when opening or closing the battery cover. Do not install the battery pack by force. If the battery pack is difficult to insert, it may be inserted incorrectly.

### Battery charge display

- After successfully inserting the battery pack, press the battery indicator button on the top of the vacuum cleaner to check the battery reserve.

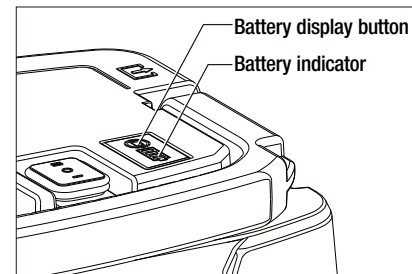


- The remaining battery power is displayed as shown in the table below.

| Battery Indicator Status |     | Battery Reserve |
|--------------------------|-----|-----------------|
| On                       | Off |                 |
|                          |     | 75%~100%        |
|                          |     | 50%~75%         |
|                          |     | 25%~50%         |
|                          |     | 0%~25%          |

Notice: Under different conditions and ambient temperature, the battery reserve indicated by the indicator light may be slightly different from the actual situation.


### Equipment Operation

- Two speed levels:  
speed 1 is low speed, speed 2 is high speed.
- Press the switch on the top of the machine to start working.  
Please press the switch to "I" or "II".  
Switch to "○" to turn off the machine.

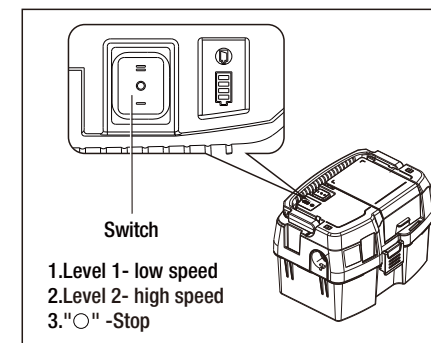


### Handle

- You can hold by the handle when moving the dust collector.

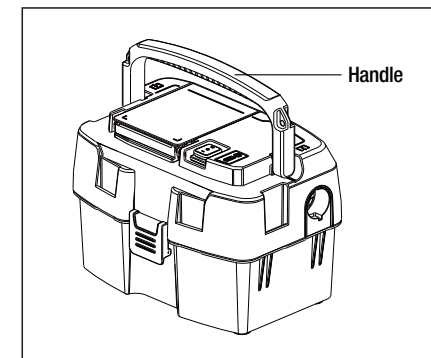

► Support the installation of the shoulder strap, hook the shoulder strap on the handle of the vacuum cleaner as shown in the picture.

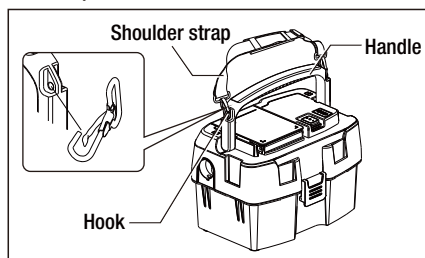

### ⚠ WARNING


If there is water in the tank when moving the machine, please turn off the vacuum cleaner and empty the tank, otherwise the water may leak out. Before any assembly operation, please turn off the power and remove the battery pack. Always wear a dust mask during installation or use.

### Hose connection

► The vacuum cleaner has independent air inlet and air outlet. Connect the hose to the right place according to needs.


### Wet/Dry vacuuming

► Insert the hose into the suction port and turn clockwise to lock it.

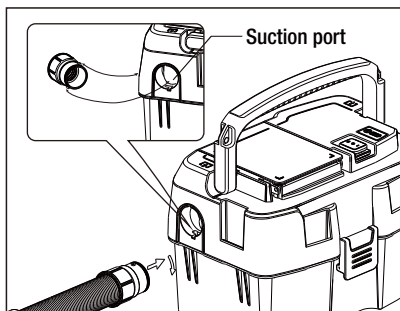

### Blowing

► Insert the hose into the blow port and turn it clockwise to lock it.

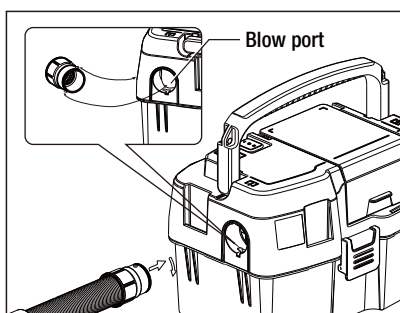


### ⚠ WARNING

Do not bend the hose with force or step on it. Never move the machine by pulling on the hose. Bending with force, pulling or stepping on the hose can crack or deform it. Do not vacuum large pieces of waste.


### Nozzle connection

- Please install different nozzles according to the specific use.
- Insert it into the end of the hose by twisting it back and forth.

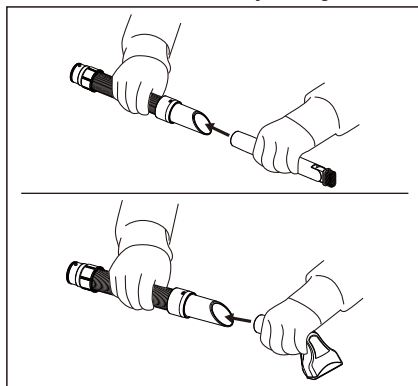


### Connect to nozzles through an adapter

- Connect to other 32mm/35mm nozzles on the market by installing an adapter.
- Installation: When using the adapter, insert the longer end into the suction pipe of the ShineMate vacuum cleaner, and the other end is connected to the suction nozzle of 32mm or 35mm.

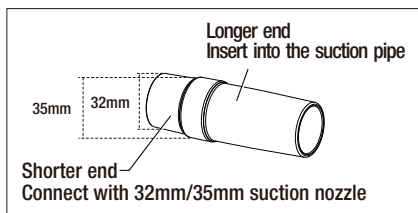


### Suction pipe+adapter+other suction nozzles

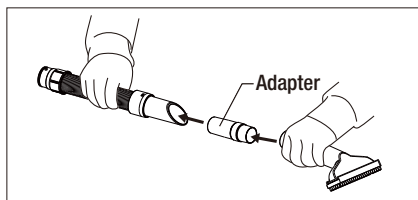

### Connecting a Vacuum Tool

- To connect the dust collection tool, please connect one end of the hose to the air outlet of the tool.
- It may be necessary to purchase appropriate adapters.

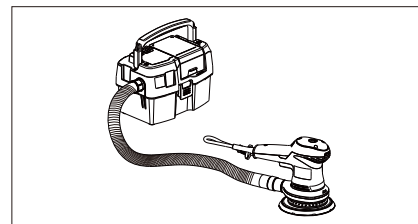


### ⚠ WARNING


When connecting the tool, make sure that the end of the hose is connected to the suction port of the vacuum cleaner.

### Storage of hose and nozzles

► Hose and nozzles can be stored in the tool basket, hose clips and hooks as shown.

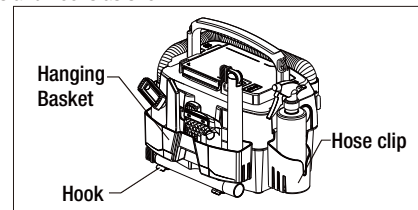

► When storing the hose, wrap it around the tool as shown before securing it to the hose clip.

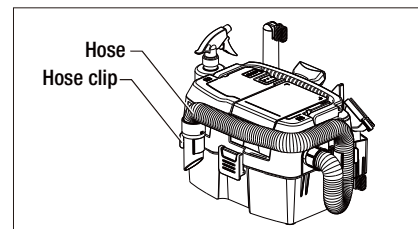

### Operation

#### Dry Vacuuming





- Connect the hose and nozzle to the suction port and switch on the tool.
- After cleaning, please empty the tank before it is full.

### ⚠ WARNING

Before dry vacuuming, be sure to install a dust bag and HEPA filter.


#### Wet Vacuuming (Upholstery Cleaning)

- When it is used for water suction/wet vacuuming or upholstery cleaning, the dust bag needs to be removed in advance;
- Choose a suitable detergent, spray it, use the brush nozzle to agitate.
- After brushing, place the suction nozzle on the dirty area and apply downward pressure while slowly pulling towards yourself to suck out dirt and excess liquid. Then repeat this process if needed.
- For multiple times cleaning, please wait until it is completely dry before using the device.

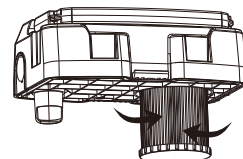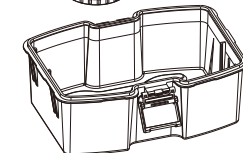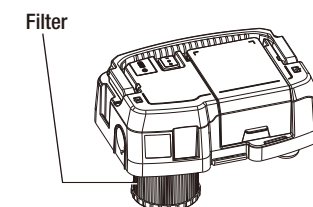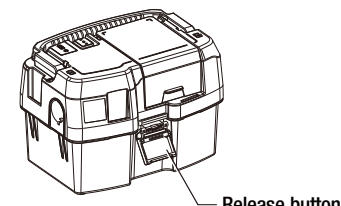

Rotate clockwise to tighten  
Rotate counterclockwise to loosen

### Dust bag

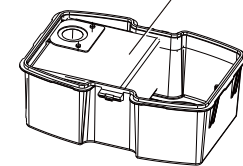

### ⚠ WARNING

- Always remove the dust bag before wet vacuuming.
- If the motor sounds louder and the suction power decreases, empty the tank.
- Using detergent more than the recommended amount may result in excessive foaming.
- For best results, rinse with water to remove residual detergent.

### ⚠ WARNING


**Do not use it to groom pets.**  
This product may wear some satin, natural fiber and soft fiber carpets. Some vacuum cleaners and carpet cleaners can wear down such carpets. Before doing a room-wide cleaning, do a spot test first and consult



the carpet manufacturer for cleaning suggestions.  
Before starting cleaning:  
►Only use the vacuum cleaner for those upholstery fabrics marked with "W" ("Wet" cleaning) or "S/W" ("Solvent/Wet" cleaning only).  
►To avoid damaging the carpet or the wooden floor under the carpet, place a waterproof material (such as plastic) under the carpet before cleaning.

Blowing

- Connect one end of the hose to the air outlet.
- Hold the other end of the hose and start the machine.

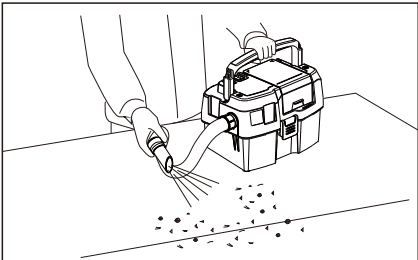

WARNING

For cleaning tight spaces, use the crevice nozzle for easy cleaning.

WARNING



Do not operate blower against direction of the wind, as this may cause foreign matter to enter the eyes.  
Never point nozzle at people.  
Do not use this tool to inflate items, it may be dangerous.  
When operating, be sure to wear goggles, a protective cap or a mask.

Maintenance After Use

- After cleaning, follow the instructions in the maintenance guide.
- Please empty the dust bag and garbage in time.
  - Please empty the dirty water tank in time.
  - Press the tank release button to empty and flush the tank.
  - Clean water helps remove dirt and debris in the tank.
  - Install the water tank when it is dry.
  - Please rinse the nozzles under the tap.
  - To maintain optimum performance, remove debris from the nozzles after use.
  - Regularly replace the dust bag and filter to ensureRemove and clean the hose in time.
  - Remove and clean the hose in time.


WARNING

Always remove the battery pack before emptying the tank, or personal injury may occur.  
When dumping garbage, do not hit the tank with force, otherwise it may cause deformation and damage to the parts.  
Empty and service the cleaner regularly, otherwise the suction power may become weak and the motor may be damaged.  
Unlock the case, and lift the container lid.  
Shake the dust off the filter, then empty the tank.

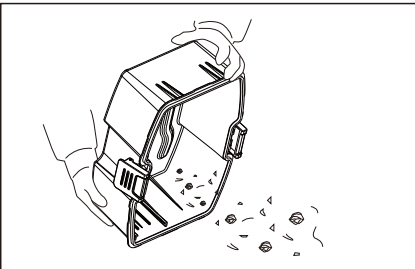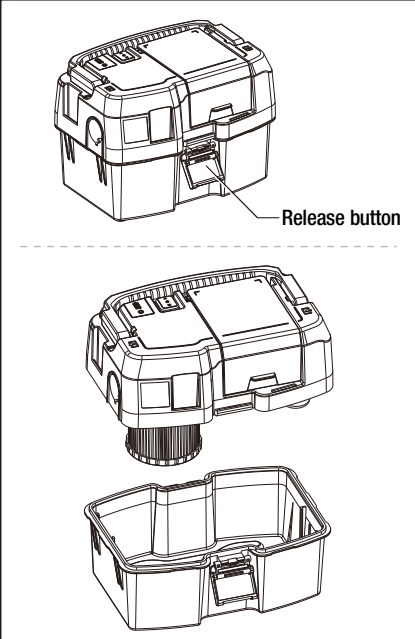

Clean the HEPA filter

- Clogging of the HEPA filter will lead to a decline in vacuum performance, please clean the filter regularly.
- Please clean and rinse the HEPA filter with water.
- The filter will wear out over time, please replace it in time.

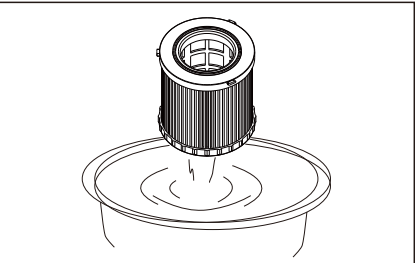

WARNING

Do not rub the HEPA filter with hard objects such as brushes. Never wash the filter in a washing machine.  
After washing the HEPA filter, please dry it thoroughly in the shade before use.

7.Machine Service and Maintenance

7.1 Maintenance

- Regular maintenance to keep the machine, battery pack and charger in best condition.
- Regularly check the motor for excessive noise, misalignment, drop in suction power, or any other problems that affect the operation. If any issue, please return the machine, charger and battery pack to the ShineMate Service Center for repair.
- If the machine does not start or operate at full power on a fully charged battery pack, clean the battery pack pins. If the machine still does not work properly, please return the machine, charger and battery pack to the ShineMate Service Center for repair.
- Do not disassemble the machine, battery pack or charger, please communicate with ShineMate Service Center for all repairs.
- If the device does not work properly, is broken, damaged, left outside or dropped into water, please contact the after-sales service.

WARNING

To reduce the risk of personal injury and property damage, do not immerse your machine, battery pack or charger in liquids or let liquid flow in.

7.2 Cleaning

- Blow off dust and debris from the battery pack vents and pins with compressed air.
- Remove dirt and dust from the case with a dry cloth, be sure to keep it away from any prongs.
- Never use flammable solvents around battery packs,

8.Hazardous substances table

According to SJ/T 11364-2014 Marking for the restriction of the use of hazardous substances in electrical and electronic product, ShineMate collects and integrates the information of hazardous substances in products, and identifies the information of hazardous substances in products according to the standard.

| Parts                        | Hazardous Substances |    |    |        |     |      |
|------------------------------|----------------------|----|----|--------|-----|------|
|                              | Pb                   | Hg | Cd | CR(VI) | PBB | PBDE |
| Housing                      | ○                    | ○  | ○  | ○      | ○   | ○    |
| Mechanical Driving Mechanism | ×                    | ○  | ○  | ○      | ○   | ○    |
| Motor Components             | ×                    | ○  | ○  | ○      | ○   | ○    |
| Control Components           | ×                    | ○  | ○  | ○      | ○   | ○    |
| Accessories                  | ○                    | ○  | ○  | ○      | ○   | ○    |
| Fittings                     | ○                    | ○  | ○  | ○      | ○   | ○    |
| Connectors                   | ×                    | ○  | ○  | ○      | ○   | ○    |
| Power Cord*1                 | ○                    | ○  | ○  | ○      | ○   | ○    |
| Battery System*2             | ×                    | ○  | ○  | ○      | ○   | ○    |

The above table is compiled according to SJ/T11364 standards.  
○: The content of such hazardous substance in all homogeneous materials of such component is below the limit in GB/T 26572  
×: The content of such hazardous substance in a certain homogeneous materials of such component is beyond the limit in GB/T 26572. It is very difficult to make the product parts completely free of the above hazardous substances with the existing technical conditions. The design will be improved gradually with the technical progress.

chargers or other appliances.  
►Do not immerse or touch the battery pack, charger and machine with liquid.

7.3 Brush Maintenance

Every 2-3 months or 100-200 hours of work, it is necessary to check whether the carbon brushes of the machine are worn. If the machine power is weak in normal use, it is necessary to stop using it immediately and replace with new carbon brushes.

7.4 Repair

For repairs, please return the machine, battery pack and charger to the nearest authorized repair center.

WARNING

To reduce the risk of injury, always unplug the charger and remove the battery pack from the charger or machine before any repairs.

7.5 Recycling and Disposal

- For unusable power tools, please remove the battery.
- Do not throw power tools in household waste!
- Used power tools must be collected separately and recycled in an environmentally friendly way. Equipment, accessories and packaging should be recycled in an environmentally friendly manner, and plastic parts are identified for recycling based on material type.  
Note: Consult your dealer for the specific disposal method!

WARNING

- Do not throw the battery into household waste, fire or water.
- Do not open used batteries.

## 9.Service

### 9.1 Warranty Service

(1) During the warranty period, ShineMate will only provide free repairs for faults caused by material defects or workmanship problems of the product. The user must present the purchase receipt and warranty card when requesting warranty, and at the same time state the full model name, body code, purchase date of the product. At the same time, provide the whole machine and the accessories used for warranty, and verify it by the authorized repair center, otherwise it will not have the right to warranty.

(2) During the warranty period, the following consumable parts are not covered by the warranty due to natural wear and tear in use:

► Worn during use: commutator, bearing, bushing, gear, handle, shell, hose, hanger, hook, etc.;

► Consumable parts: working nozzles, filters, dust bags, etc.;

► Attached accessories and fittings.

Note: The cost of parts and maintenance labor for non-warranty items shall be borne by the user.

(3) The following are not covered under warranty:

· Failure to present a valid warranty card and proof of purchase, or the information on the warranty card does not match the physical object.

· Damage caused by failure to use, maintain and store the product in accordance with the instructions for use.

· Damage caused by dropping, water ingress, etc., due to improper use, storage or transportation.

· Damage caused by failure to use original ShineMate parts (e.g. carbon brush) or recommended accessories and lubricants.

· The user disassembles, or causes damage by repairing, rebuilding, disassembling, or maintaining in non-ShineMate authorized service points.

· Damage caused by forcing the brakes or exerting excessive pressure on power tools when they are operated at high speed.

· Working in dusty or humid environments for long periods of time without timely maintenance due to the entry of foreign objects.

· Battery damage caused by frequent under-charging or under-discharging of the battery or by being hit or changing the charger plug on its own.

(4) ShineMate reserves the right to modify the above terms and conditions at any time without notice, and has the final interpretation of the above warranty terms.

Visit the official website [www.ShineMate.com](http://www.ShineMate.com) for the latest product information.

### EXEMPTION FROM LIABILITY

The manufacturer and his representative are not liable for any damage and lost profit due to interruption in business caused by the product or by an unusable product.

The manufacturer and his representative are not liable for any damage which was caused by improper use of the power tool or by use of the power tool with products from other manufacturers.

### CE-DECLARATION OF CONFORMITY

We declare under our sole responsibility that the product described under "Technical Data" conforms to the following standards or normative documents:

EN 60335-1, EN 60335-2-2, EN 55014-1,  
EN 61000-3-2, EN 61000-3-3, EN 55014-2,  
2014/30/EU, 2014/35/EU



Zhang Yong  
General Manager  
Jan 1st, 2023

ShineMate Tool System  
Yongkang Meiloy-K&FP Tools Co., Ltd.  
No. 218 Meilong Rd., Yongkang, Zhejiang, China  
[info@shinemate.com](mailto:info@shinemate.com)  
[www.ShineMate.com](http://www.ShineMate.com)



You now own a quality  
product manufactured by  
ShineMate.

Distributed by:

\_\_\_\_\_



You now own a quality  
product manufactured by  
ShineMate.

Distributed by:

\_\_\_\_\_

Serial No.

### Warranty Card

#### DETAILS OF PRODUCT:

Machine \_\_\_\_\_ Model \_\_\_\_\_

Voltage \_\_\_\_\_ Purchase Date \_\_\_\_\_

Customer name and address \_\_\_\_\_

\_\_\_\_\_

Post Code \_\_\_\_\_

Serial No.

### Warranty Card

#### DETAILS OF PRODUCT:

Machine \_\_\_\_\_ Model \_\_\_\_\_

Voltage \_\_\_\_\_ Purchase Date \_\_\_\_\_

Customer name and address \_\_\_\_\_

\_\_\_\_\_

Post Code \_\_\_\_\_

## STATEMENT OF WARRANTY CARD

(1) This product is guaranteed from defects in material and workmanship, for the detailed guarantee period, subject to your local distributor and legal warranty regulations, effective and evidenced from date of original invoice or delivery note.

(2) Defects caused by normal wear and tears, unauthorized/improper maintenance/handling or overload are excluded from this guarantee.

(3) In the event of malfunction within the guarantee period, please return the product UNDISMANTLED to your dealer with the warranty card.

(4) Your statutory rights in respect of defective products remain unaffected by the warranty.